


LOOK AFTER YOUR LIVERY

Vehicle Cleaning Guidelines

These instructions apply to all makes of prismatic materials including Nikkalite Flexible Crystal Grade (CVF)

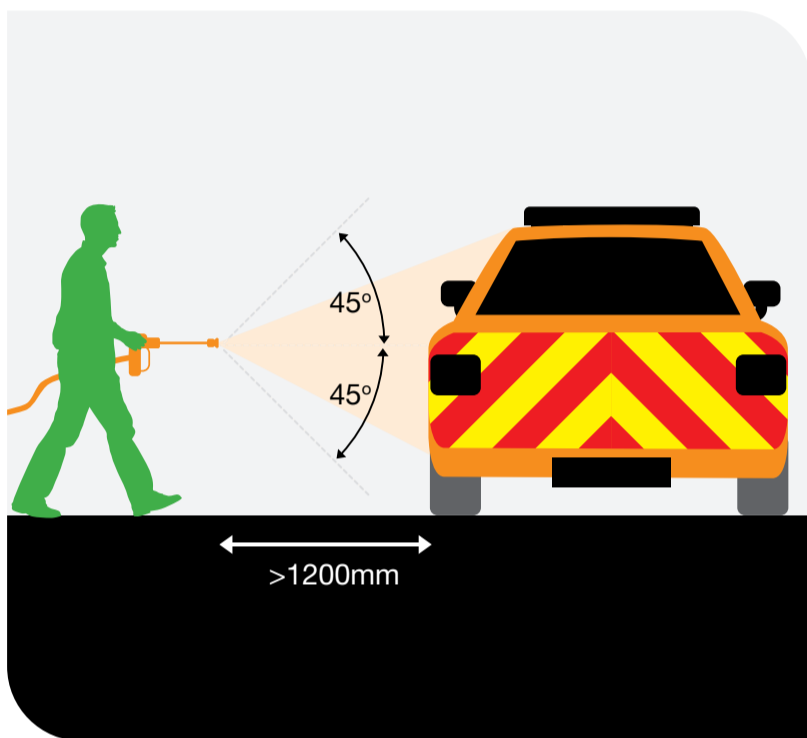

Correct

- ✓ Do use a fan spray of water
- ✓ Maximum 75 bar water pressure, maximum temp 38°C
- ✓ Maintain nozzle more than 1200mm from livery edges
- ✓ Do use a mild detergent & clean water
- ✓ Do use a soft brush/cloth
- ✓ Avoid Chevron tips, corners and vulnerable areas of kit



Incorrect

- ✗ Do not direct high pressure water at edges of sheeting
- ✗ Do not hold nozzle closer than 1200mm to livery
- ✗ Do not direct water at an angle of less than 45° to livery
- ✗ Do not use solvents, abrasive, alcohol based cleaners or vehicle under body cleaning solutions
- ✗ Do not steam clean liveries